
MAINTOP PARTS

For Model: RS386PXBB1, RS386PXBQ1 (Black) (Designer White)

30" ELECTRIC SLIDE-IN RANGE SELF CLEAN OVEN

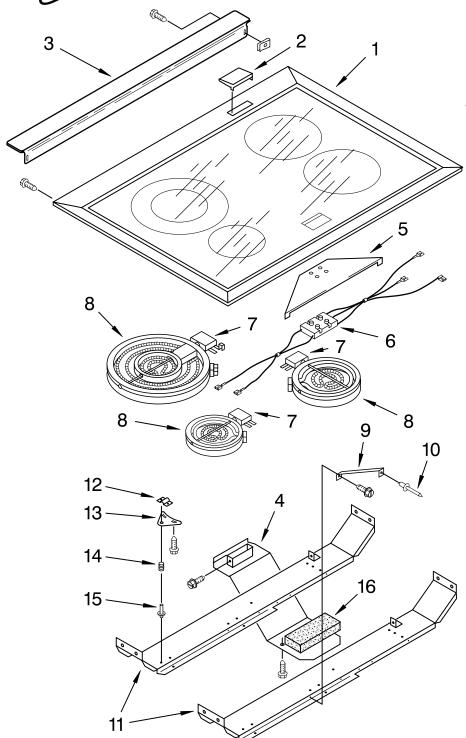


Illus. Part No. No. DESCRIPTION

NOTE: The screws and nuts required to attach a part are listed immediately following that part.

1		Cooktop
•	4389862	
	4389861	White
	4389530	
2	.00000	Trim, Vent
_	4389703	Black
	4389754	White
3	4389376	Filler, Backsplash
•	4389531	Screw
	4389560	Nut, Speed (2)
4	4389675	Vent Assembly
	4389650	Screw
5	4389691	Bracket, Ind Light
6	4389708	Light, Indicator
7		Limiter
	4389688	1400W – LF
	4389687	1900W – RR, RF
	4389689	2400W – LR
8		Element, Radiant
		(Includes #7)
	4389678	1400W – LF
	4389679	1900W – RR, RF
	4389680	2400W – LR
9	4389674	Bracket, Maintop
	4389530	Screw
10	4389714	Rivet, Pop
11	4389706	Support, Element
12	4389716	Clip, Push-On
13	4389683	Bracket, Element
	4389709	Screw
14	4389681	Spring, Element
15	4389684	Stud, Element
16	4389693	Insulation, Flue


CONTROL PANEL PARTS

For Model: RS386PXBB1, RS386PXBQ1 (Black) (Designer White)

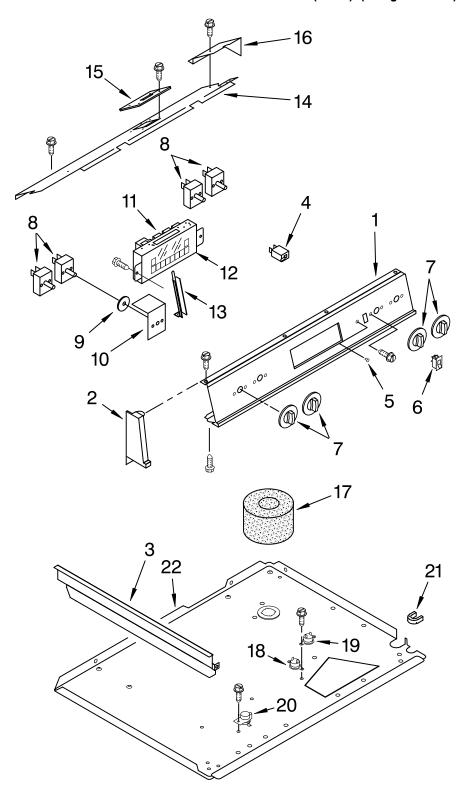


Illus. No.	Part No.	DESCRIPTION
1		Panel, Control
ı	4389668	Black
	4389669	
	4389712	Screw
2		Endcap
	4389411	L.H. Black
	4389360	
	4389361	L.H. White
	4389362	R.H. White
3	4389530 4389364	
3	4389648	
4	4389577	Light, Ind. (Oven)
5	4389578	Lens, Ind. Light
6		Switch, Rocker
	4389369	
-	4389370	
7	4389573	Knob, Control (4) Black
	4389574	
8	4000014	
	4389672	Switch, Infinite 2000W, RF & RR
	4389572	1500W, LF
	4389571	2350W, LR
0	4389713	Screw
9 10	4389690 4389694	
11	4389570	Timer, ERC
12	4000010	Overlay, Timer
	4389366	Black
	4389367	
13	4389673	Bracket, Timer
4.4	4389527	
14 15	4389696 4389671	Cover, Wire Plate, Cover
16	4389582	Extension, Cover
17	4389686	Seal, Vent
18	4389421	Switch, Limit
19	4389605	
20	4389603	Switch, Limit
21 22	4389580 4389682	Grommet Bottom, Burner Box
22	-1 303002	Dottolli, Dulliel DOX

OVEN DOOR PARTS
For Model: RS386PXBB1, RS386PXBQ1
(Black) (Designer White)

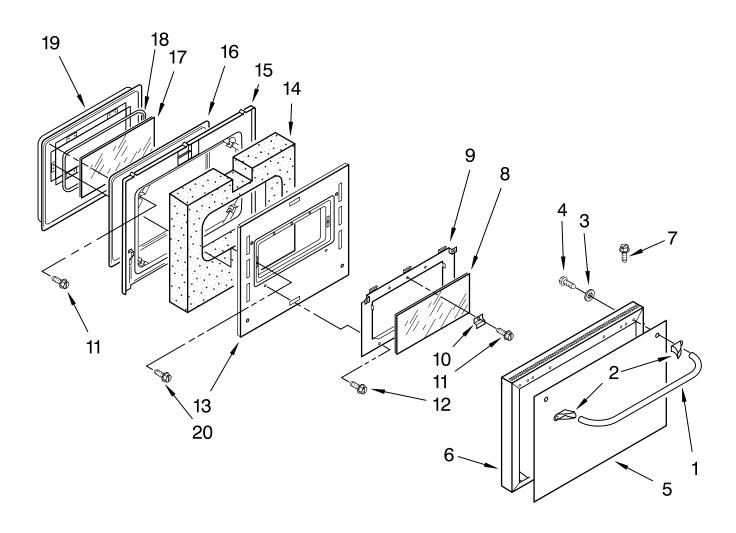


Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1		Handle, Oven Door	6		Frame, Oven Door	11	4389540	Screw, Retainer
	4389412	Black		4389602	? Black	12	4389534	Screw, Retainer
	4389413	White		4389667	' White	13	4389397	Retainer, Insul.
2		Endcap, Handle	7		Screw, Frame (6)	14	4389394	Insulation, Door
	4389521	•		4389552	2 Black	15	4389396	Lining, Door
	4389522	White		4389538	8 White	16	4389600	Gasket, Oven Door
3	4389418	Spacer, Handle (2)	8	4389402	2 Glass, Middle	17	4389403	Glass, Inner
4		Screw, Handle (2)	l 9	4389399	Plate, Glass Mtg.	18	4389408	Seal, Inner Glass
5		Glass, Outer Door	10		Retainer, Glass	19	4389395	Plug, Oven Door
•	4389576	,			, , , , , , , , , , , , , , , , , , , 	20	4389529	
	4389575							

LOCK MOTOR PARTS
For Model: RS386PXBB1, RS386PXBQ1
(Black) (Designer White)

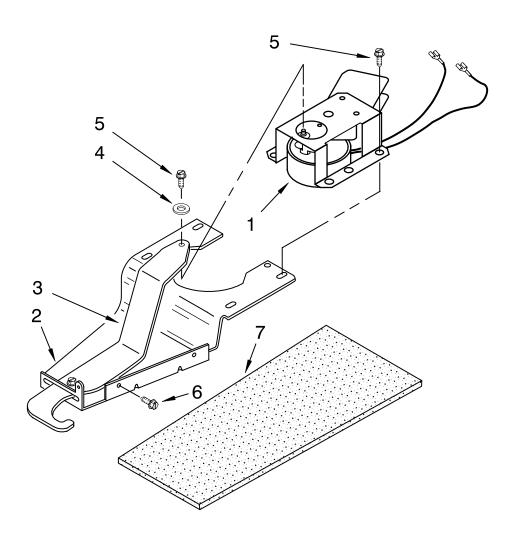

Illus. No.	Part No.	DESCRIPTION
1	4389419	Motor, Lock
2		Plate, Door Lock
3		Lever, Lock
4	4389659	
5	4389526	Screw (4)
6	4389535	Screw(5)
7	4389606	Insulation, Motor

OVEN BODY PARTS

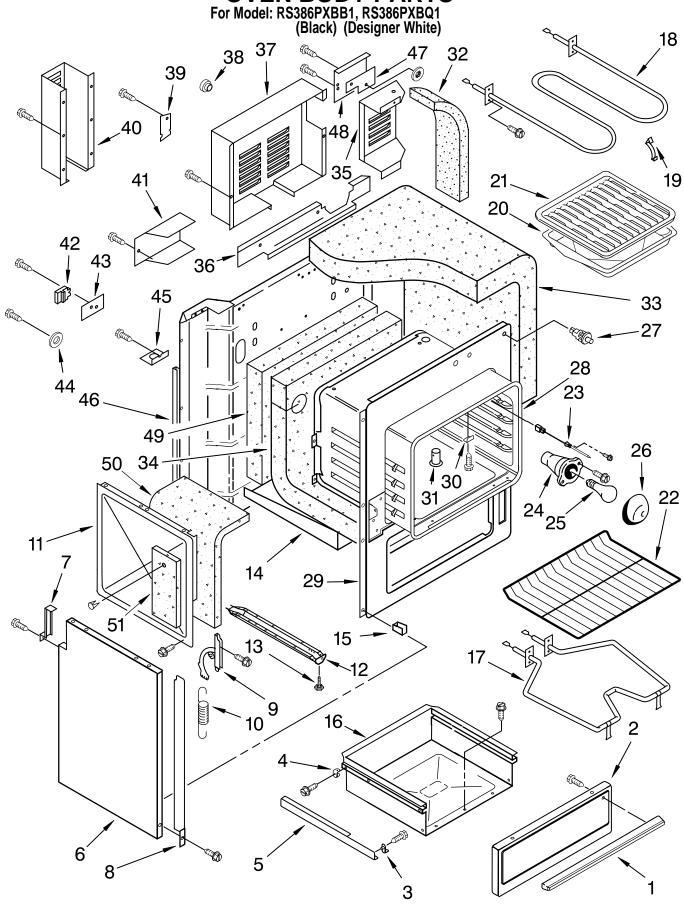

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OVEN BODY PARTS

For Model: RS386PXBB1, RS386PXBQ1 (Black) (Designer White)

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
NOTE: The screws and nuts		11	4389613 4389529	Retainer, Side(2) Screw	36 37	4389704	Support, Top Shield, Upper	
required to attach a part are listed immediately following		12	4389469	Rail, Base (2) (Includes No.13)	38	4389646	Screw Bushing, Snap	
ιπαι μ	that part.		13	4389478	Leg, Leveler (4)	39		Plate, Flue Cover
1		Handle, Drawer	14		Retainer, Lower	00	4389646	
	4389621	Black	15		Spacer, Body (4)	40		Cover, Upper Wire
	4389665	White	16		Drawer, Storage		4389529	
	4389648	Screw (2)	17		Element, Bake	41		Cover, Lite Wire
2		Panel, Drawer	18		Element, Broil		4389529	
	4389619			4389529		42	4389627	Block, Terminal
	4389620		19		Support,Broil (3)			(Pigtail)
	4389540		20		Pan, Broiler	43	4389579	Shield, Disconnect
3		Stop, Glide (2)	21		Grid, Broiler		4389651	Screw (2)
		Screw (2)	22		Rack, Oven(2)	44		Washer, Ground
4		Stop, Glide (2)	23		Sensor, Oven		4389540	
_		Screw (2)			Screw (2)	45		Plate, Cord Mtg.
5	4389470	Support, Drawer(2)	24		Housing, Lite		4389529	
6		Panel, Bodyside	0.5		Screw (2)	46	4389695	Back, Main
		Left Side	25		Bulb, Oven Lite	47		Insulation,
_		Right Side	26		Lens, Oven Lite			Flue Shield
7		Filler, Rear (2)	27		Switch, Door Lite		4389529	Screw
_	4389646		28	4389609	Body, Oven	48	4389698	Shield, Flue
8		Trim, Side	29	4389610	Frame, Front		4389648	
		L.H. Black	30		Cover, Front		4389718	Nut, Speed
		R.H. Black		4389535		49	4389685	Insulation, Back
		L.H. White	31		Tube, Vent	50		Insulation, Side
_	4389468	R.H. White	32	4389701	Insulation,	51	4389700	Insulation, Side
9		Hinge, Oven Door		4000000	Top & Side (2)		4389717	Button, Dart (2)
		Left Hand	33		Insulation, Wrap			, , ,
		Right Hand	34	4389623	Insulation,	ANT	I-TIP K	IT
4.0		Screw (6)	0.5	4000007	Back & Bottom			-
10	4389474	Spring, Door (2)	35	4389697	Shield, Wire		4389471	Anti-Tip Kit

FAN PARTS

For Model: RS386PXBB1, RS386PXBQ1 (Black) (Designer White)

